





Clean-Drain

In high-load furnaces and high quality standards of glass chemical glass inhomogeneity often occurs. These can significantly interfere with the quality. Often such inhomogeneities are caused by zirconium materials in connection with the melt (basin, stirrer, throat etc.).

Other impurities can also be removed with a clean drain from the melt.

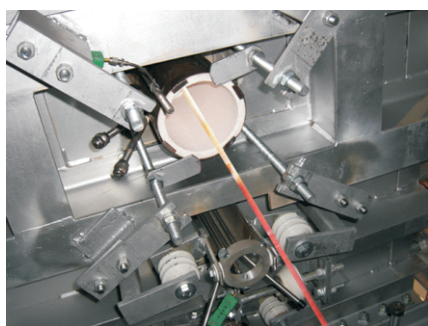

Drain device with heating and drain protective tube

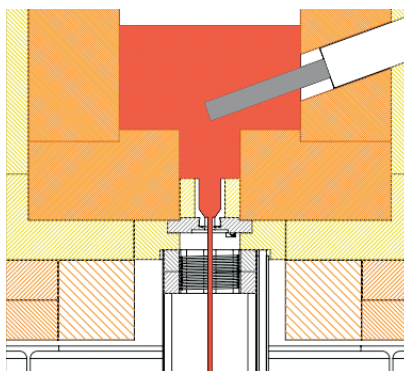

The determination of the location of the drainage in operating furnaces requires precise knowledge of the operating behavior of the furnace. In order to achieve the greatest possible effect, the experience of the customer is very important to us.

The drainage quantity can be varied with this system from 400 - 1300 kg / d

